
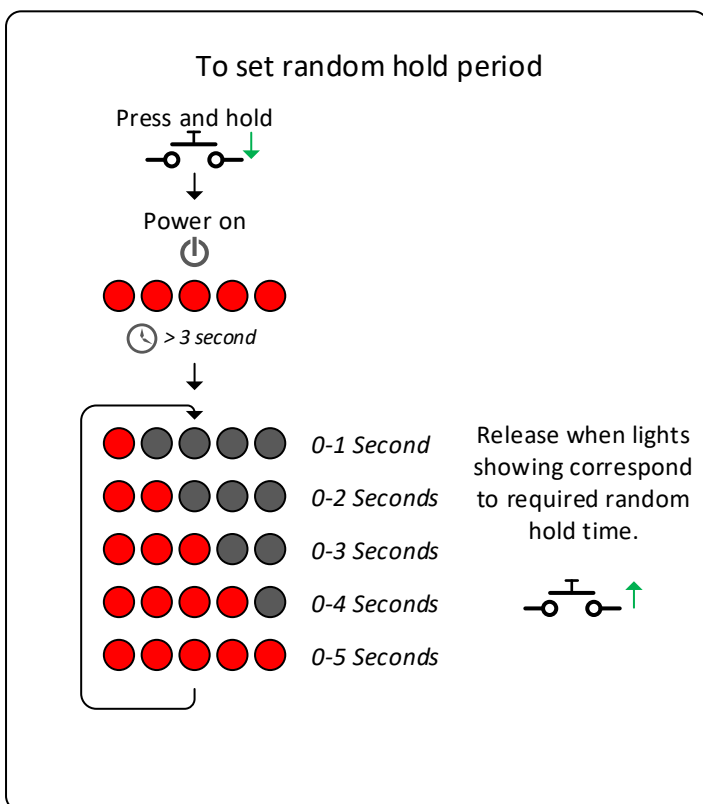
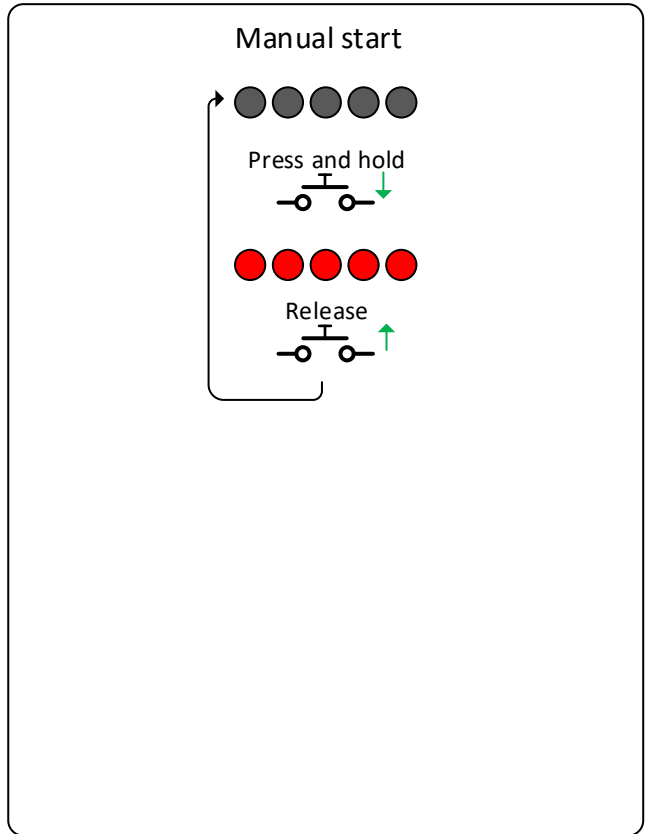


Picprojects Race Start Controller V5.x.x Firmware

Quick User Guide

The controller has two start modes

1. Automatic 5 light sequence with random hold and start abort
2. Manual mode

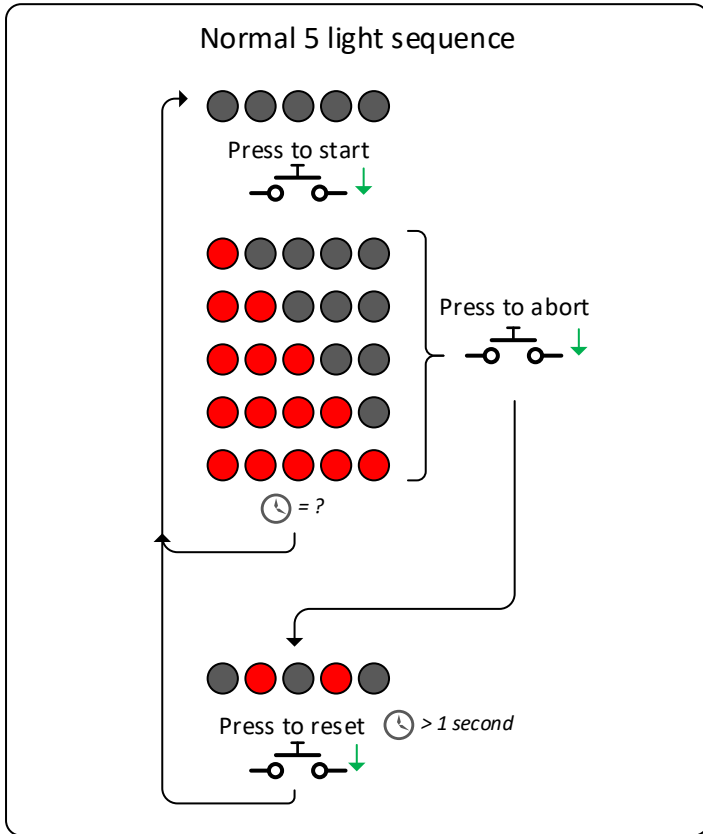

The random hold time out can be set to one of five time ranges.

This only needs to be done if you want to change it, the board always powers up using the last saved timeout setting.

- To enter the setup mode, press and hold the start switch while powering on the control board.
- The lights will begin to sequence as shown left
- Release the switch when the lights showing correspond to the required timeout period.
- Selected timeout is saved to non-volatile memory